

MONTHS	6	12	24	36
KMS x1000	5	35	65	95
SERVICE ITEMS				
Replace Engine Oil and Filter	R	R	R	R
Air Filter Element & Clean filter housing	O	R	O	R
Check Pollen Filter condition	O	R	O	R
Fuel Filter & O ring replace every 12 mths	O	R	R	R
Coolant Level	Replace every 2 years or 65,000Kms			
Washer Fluid Level & Fill	O	O	O	O
Check Steering Assy for leaks & security of system fluid change	Replace every 3 years or 95,000Kms			
Fluid/Oil/Fuel Leaks check pipes for security	O	O	O	O
Brake Fluid Level	Replace every 2 years or 65,000Kms			
Aux/Acc Belt Condition	O	O	O	O
Check Exhaust for Leaks/Damage & security	O	O	O	O
Check Brake Pads + Rotors for wear Report wear %	O	O	O	O
Brake Hoses/Lines security & leaks	O	O	O	O
Brake Operation	O	O	O	O
Check Park Brake Operation adjust as required	O	O	O	O
Tyre Tread + Rotate tyres as wear indicated*	A	A	A	A
CV's/Driveshafts	O	O	O	O
Check clamps on intercooler pipe - torque to 5Nm	O	O	O	O
Steering Components security	O	O	O	O
Suspension Components security	O	O	O	O
Engine Idle speed	O	O	O	O
Check Exterior Lights for correct operation	O	O	O	O
Check Washers/Wipers/Auto Function	O	O	O	O
Air-con Operation and Connections	O	O	O	O
Interior Controls/Switches operation	O	O	O	O
Inspect Airbag Surfaces	O	O	O	O
Seatbelt Functions /warning lights	O	O	O	O
Door Locks/Hinges - Lube	O	O	O	O
Bonnet Latch/Hinges/Struts	O	O	O	O
Battery Condition and Charge Rate Record	O	O	O	O
Chassis/Bumper/Mirror Security	O	O	O	O
Check Vacuum System Pipes & Connections	O	O	O	O
Diagnostic Codes - Print Test Report	O	O	O	O
Auto Transmission Fluid	Check every 12 mths and change at 95,000kms			
Manual Transmission 6MT	5,000kms or every 3 years 95,000Kms			
Check operation of electrical side- noise / seizing	O	O	O	O
Rear Axle Lubricant	5,000kms or every 3 years 95,000Kms			
Reset Service Interval Counter	A	A	A	A
Road Test	O	O	O	O